

WAT-231S2





Watec:WAT-231S2: <u>!!LOW Light</u>, <u>HIGH Resolution</u>, <u>COLOR</u>!!

The new WAT-231S2 captures images in minimal light conditions of 0.05lux in over 540TVL of high resolution true color producing imagery. This color camera utilizes the NEWEST in DSP technology providing crisp, vivid colors empowering your team with the advantage to clearly identify colors as they appear to the human eye. Further meeting your requirements of perfection is this cameras' built in feature of pixel correction, enabling you the ability to "erase" up to 32 hot pixels for applications requiring blemish free video.



0.05lux

540TVL



(2)



Watec New WAT-231S2-540TVL, 0.05lux



The image to the immediate left displays Watec's new color WAT-231S2 in a low light environment enabling your team to clearly identify a threat in a chromatic state. At 0.05lux you are now able to dually use this color camera in both daylight as well as night time operations making it a true 24 hour solution.

Photograph 2 clearly illustrates the sacrifices made when implementing the standard camera technology into the same low light environment.

As you can see the only semi-noticeable objects have been outlined. It is obvious that standard technology does not provide your operators the crucial data needed to safely complete your mission.

When your application demands high resolution, superior color image quality in both day and night environments look to Watec's' new WAT-231S2 for the low light color solution.




WAT- 23152


SPECIFICATIONS

Model		WAT-231S2 (NTSC)	WAT-231S2 (PAL)	
Pick-up element		1/3 inch interline transfer CCD image sensor		
Number of total pixels		811(H) × 508(V)	795(H) × 596(V)	
Number of effe	ective pixels	768(H) × 494(V)	752(H) × 582(V)	
Unit cell size		6.35µm(H) × 7.4µm(V)	6.5µm(H) × 6.25µm(V)	
Imaging system		Ye, Cy, Mg, and G complementary color mosaic filters on chip		
Synchronizi	ng system	Internal		
Scanning	system	2:1 interlace		
Video c	output	Composite, Y/C: 1.0 V(p-p), 75 Ω, unbalanced		
Resolution	on (H)	More than 540TVL (Center)		
Minimum ill	umination	0.05 lx. F1.2		
S/N	1	More than 50dB (M	/IGC=0dB, γ=1.0)	
	Fixed	1/60, 1/100 sec.	1/50, 1/120 sec.	
AE mode		1/250, 1/500, 1/1000, 1/20	000, 1/4000, 1/10000 sec.	
	EI	1/60 - 1/100000 sec.	1/50 - 1/100000 sec.	
		· · · · · · · · · · · · · · · · · · ·	1/50 - 1/100000 sec.(flicker suppress)	
White ba	alance	ATW(color rolling less), PWB, MWB, Preset (3200K, 4300K, 5100K, 6300K)		
AG	С	HI: 0~38dB / LO: 0~32dB		
MG	-	0~32dB		
Gamma cha	racteristics	$\gamma \doteq 0.45(\text{ON}) / \gamma = 1.0(\text{OFF})$		
Lens	-	Video / DC (EIAJ arrangement, Auto-select)		
Back light cor	•	ON / OFF		
White blemish correction		Up to 32 pixels		
Power supply		DC+12V±10%		
Power consumption		2.1W (175mA)		
Operating temperature		-10 - +50°C (Without condensation)		
Storage temperature		-30 - +70°C (Without condensation)		
Operating / Storage humidity				
Lens mount		CS mount (Back focus adjustable)		
Weight		Approx. 140g		

*Design and specifications are subject to change without notice.

DIMENSIONS (mm)

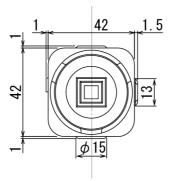

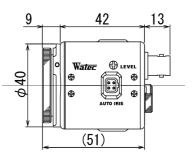



Color CCD Camera

WAT-231S2

Operation Manual

This Operation Manual covers safety, camera functions, installation and the correct operating procedure for the WAT-231S2. First, we ask you to read this Operation Manual thoroughly, then install and operate the WAT-231S2 as advised. In addition, for future reference, we also advise safekeeping of this manual

Please contact the distributor or dealer from which the WAT-231S2 was purchased, if you do not understand the installation, operation or safety instructions laid out in this manual. Not understanding the contents of the Operation Manual sufficiently may cause damage to the camera.

Guide to the Safety Symbols

The definitions of the symbols used in this operation manual are:

Danger

Caution

When you do not adhere to or take notice of the "Danger" sign, it may lead to a serious accident such as death or injury caused by fire or electric shock

When you do not adhere to or take notice of the "Warning" sign, Warning it may cause severe damage such as a physical injury.

When you do not adhere to or take notice of the "Caution" sign, it Caution may incur injury and cause damage to peripheral objects in the immediate surroundings.

Cautions for Safety

The WAT-231S2 is designed to be used safely; however, it may lead to physical accident caused by fire and electric shock if not used correctly. Therefore, please keep and read the "Cautions for safety" below for protection against accidents.

• Do not disassemble and/or modify the WAT-231S2. Danger

• Do not operate the WAT-231S2 with wet hands.

• Use only the AD901-120/230 or equivalent power adaptor **M**warning for the WAT-231S2.

- The recommended voltage is DC+12V \pm 10%
- Do not expose the WAT-231S2 to wetness or high moisture conditions.

The WAT-231S2 is designed and approved for indoor use only. The WAT-231S2 is not water-resistant or waterproof. If the location of the camera is outdoors or in an outdoor like environment, we recommend that you use an outdoor camera

housing • Protect the WAT-231S2 from condensation.

Keep the WAT-231S2 dry at all times during storage and operation

 Should the camera not work properly, switch off the power immediately. Then check the camera according to the "Problems and Trouble shooting" section.

• Avoid the striking of hard objects or dropping the WAT-231S2.

The WAT-231S2 uses high guality electrical parts and precision components

• Do not connect any power supply directly to the video out terminal of the unit.

Do not connect the WAT-231S2 with any monitor using a video/power single transmission terminal. The WAT-231S2 is not designed for use with this type of equipment. We also advise you to read the operation manual of the monitor you plan to use before any connections are made.

- Do not install the WAT-231S2 in a position subject to direct sunlight.
- Sunlight shinning directly onto the WAT-231S2 lens can cause damage to the CCD.
- Select a stable place for installation of the WAT-231S2. Use a support of durable strength around an installation position on a ceiling or wall when a camera stand or tripod is used
- Do not move the WAT-231S2 with the cables connected. Before moving the WAT-231S2, always remove the video cable and power cable from the rear of the camera first.

 Avoid using the WAT-231S2 near any strong electromagnetic field.

After installing into main equipment, if the WAT-231S2 is exposed to electromagnetic waves causing the monitored image to become distorted, we recommend the camera be shielded by appropriate protective casing.

Problems and Trouble Shooting

If any of the following problems occur when using the WAT-231S2,

- An optimal picture cannot be obtained, after checking that all the cables and connections are correctly in place
- Smoke or any unusual odor emerges from the WAT-231S2.
- An object becomes embedded or a quantity of liquid seeps into the camera housina
- . More than the recommended voltage or/and amperage has been applied to the WAT-231S2 by mistake
- Anything unusual occurring to any equipment connected to the WAT-231S2.

Disconnect the camera immediately according to the following procedures:

(1)Switch off the main power supply to the camera.

②Remove the power and video cables connected to the WAT-231S2. ③Contact the distributor or dealer from which the WAT-231S2 was purchased

About EMC


The WAT-231S2 is in conformity with EMC test standards carried out by authorized organizations in Japan.

> NTSC FCC Part15 class B PAL EN61000-6-3/EN50130-4


Do not modify the WAT-231S2. A modified camera may not (
Danger conform to EMC test standards.

Contents

Using the contents figures below, check to make sure all parts are present before use.

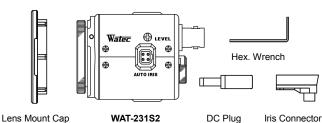

Description of Parts

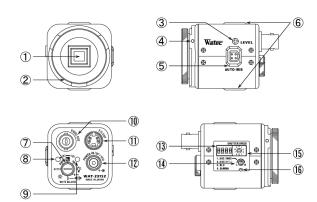

①CCD FRONT FACE

• The light receiving face of the CCD camera

(Dirt, water or oil deposits on the CCD will cause an unclear picture on the monitor. Attach the lens cap to protect the lens and CCD from contamination and damage.)

2LENS MOUNT

- Mount for the lens (Thread type) ③IRIS LEVEL VOLUME
- · By controlling the volume, the iris level of a DC iris lens can be adjusted. **④**FOCUSING ADJUSTMENT SCREWS
- There are 3 hex. adjustment screws each placed at intervals of 120° for fine focusing of the lens.

⑤AUTO-IRIS SOCKET

- . This socket is for a video or DC auto-iris lens cable connector. (Video/DC: Auto selected by the camera)
- 6 TRIPOD MOUNTING SCREW HOLES
- Mounting holes for stands. The size of these threads are 1/4", 20 threads, 4.5 ± 0.2 mm, which is the same as any standard camera tripod (U1/4").
- (7)WHITE BALANCE MODE SELECTOR
- The selector for the white balance mode
- ⑧PUSH BUTTON (R) (MWB mode)
- . The button for adjustment of the white balance to increase the red hue of a monitored image using M.W.B mode.
- (9) PUSH BUTTON (B) (MWB mode)
- The button for adjustment of the white balance to increase the blue hue of a monitored image using MWB mode.
- 10VIDEO OUT (BNC)
- · The terminal for composite video signal output
- 1)Y/C OUT
- The terminal for Y/C signal output
- 12POWER IN
- · The terminal designed for the DC-plug of the power adaptor
- **13**FUNCTION SWITCHES
- · Functional switches for setting AGC, BLC and gamma control. MGC VOLUME ADJUSTING
- The volume for setting manual gain control
- **(BAE MODE CONTROL**
- . The switch for the electronic shutter mode control according to the object being monitored
- **(6)WHITE BLEMISH CORRECTION BUTTON**
- The button for correction of white blemish

Power Supply

If any other power adaptor besides the AD901-120/230 is used, please use a stabilized power adaptor designed for DC+12V \pm 10%, with a current capacity of more than 250mA.

Use the optional DC plug if the shape or polarity of the DC plug of the power adaptor to be used is not compatible with the camera (See the drawing on the right below).

 
Marning Caution

The wiring on the connector must be exact. Be careful no to touch the other terminal while wiring. Protect the wiring portion by using insulation tape after wiring. If the above care and attention is not adhered to, damage to the WAT-231S2 and power adaptor may occur and may also cause fire.



Auto-iris Lens

Before connecting the auto-iris lens, please make sure that the pin configuration is correct by checking with the following table. If the configuration of your iris connector is different from the following, the plug and pins will need to be rewired.



Set-up and Operation

- 1) Ensure that the power to the WAT-231S2 and the peripheral equipment is turned off before making any connections.
- 2) Remove the lens mount cap from the WAT-231S2 and attach the CS-mount lens. Use the optional C-mount adaptor (34CMA-R) when a C-mount lens is used.
- 3) Connect the iris control cable to (5)AUTO-IRIS SOCKET on the WAT-231S2 when an auto-iris lens is being used.
- 4) Connect (IVIDEO OUT on the WAT-231S2 with the monitor, using a coaxial cable with 75 Ω impedance, such as an RG-58/U or an RG-6/U. If the monitor has an S-terminal, high resolution imaging is possible by connecting with ①Y/C OUT.

The ①Y/C OUT can be used together with the ①VIDEO OUT.

*Select a monitor with the same television system as the WAT-231S2

NTSC or PAL. A monitor with more than 600TV lines is recommended.

- 5) Insert the power plug of the power adaptor to <a>DPOWER IN on the back panel of the WAT-231S2. Confirm that the power adaptor is not connected to the power supply before insertion of the power plug into DOWER IN.
- 6) Turn on the power to the WAT-231S2, monitor and all other allied equipment. When a picture cannot be obtained on the monitor, or a problem occurs, check and follow the procedure mentioned in the [Problems and Trouble Shooting] section.
- 7) After following the procedure below and the picture is still out of focus, open the iris fully and loosen @FOCUSING ADJUSTMENT SCREWS with the hex. wrench and move the lens forwards until a clear picture is obtained

Manual Lens	Adjust the focus and iris to the best position on the lens.	
Video Auto-iris Lens	Adjust the focus on the lens.	
DC Auto-iris Lens	Adjust the iris level on the camera, then adjust the focus on the lens. See below.	

Iris Level Adjustment (for DC auto-iris lenses only) Adjust ③IRIS LEVEL VOLUME placed on the side of the unit until an acceptable light level is attained. No change will occur if a video iris lens or manual iris lens is fitted.

8) Select any required shutter speed by the ⁽¹⁵⁾AE MODE CONTROL to one of its 10 positions. (Shutter mode is set to 8 upon shipment)

No. M		ode	Shutter Speeds (Sec.)		
INO.	IVI	oue	NTSC	PAL	
0	0)FF	1/60	1/50	
1	F	FL	1/100	1/120	
2	E	ES	1/250		
3	E	ES	1/5	00	
4	E	ES 1/1000		000	
5	ш	ES	5 1/2000		
6	E	ES	1/4000		
7		ES 1/10000		000	
8		OFF	1/60-1/100000	1/50-1/100000	
9	EI	: FL	1/00 1/100000	1/30-1/100000	
AE Mode			Effect		
OFF Fixes the shutter speed to NTSC: 1/60, PAI		C: 1/60, PAL: 1/50.			
Re			duces the flickering phenomena occurring on the		
FL		monitor screen caused by fluorescent or mercury			
		lamps.			
ES		Fixes the shutter speed in a range between 1/250-			
		1/10000. (6 steps)			
	Automatically selects the shutter speed according to				

EI	OFF	the lighting conditions, retaining the proper exposure mode. (Electronic Iris)
	FI	For electronic iris reducing the flickering phenomena occurring on the monitor screen caused by fluorescent

or mercury lamps.

%In EI mode, intense light may leave a trail on the screen longitude. This smearing is a natural phenomenon and is not due to equipment failure or fault.

9) Select any required white balance mode by ⑦WHITE BALANCE MODE SELECTOR. (Shutter mode is set to AUTO upon shipment)



CL OSED 4

Mode	Name	Effect	
AUTO	Auto-tracking	Automatically follows and adjusts to the changing color temperature of the illumination.	
MWB	Manual	Manual adjustment using ⑧⑨PUSH BUTTON(R)(B) as required.	
РШВ	Push-lock	Adjusted with (9)PUSH BUTTON(B) according to the color temperature of the environment. As long as (B)button is pressed, the color temperature is adjusted according to the environment. As soon as the (B)button is released, the color temperature will be fixed at that setting.	
	Lock	To lock your manually adjusted color temperature settings.	
` _	Incandescent (=3200K)	Color correction to give natural color renditions under incandescent lighting.	
	Fluorescent 1 (=4300K)	Color correction to give natural color renditions under reddish fluorescent light.	
1 /→ 2	Fluorescent 2 (=5100K)	Color correction to give natural color renditions under bluish fluorescent light.	
-\	Sunlight (=6300K)	Used in sunlight to retain white balance.	

10) Set the (I)FUNCTION SWITCHES according to your requirements.

ON 1 2 3 4

Switch	Setting	Effective Condition (Example)	Factory Settings
1.	ON	 When sensitivity is more important than the SN ratio. When an auto iris lens can not be used for general surveil- lance purposes. 	
AGC	OFF [MGC]	 Increase the MGC in a low light environment when object illumination is important. Lower the gain control for a clearer picture with less noise. 	
2.	ON [HI]	 When sensitivity is more impor -tant than the SN ratio 	\checkmark
AGC	OFF 【LO】	 When SN ratio is important and AGC is also required. 	
3. BLC	ON	When the picture of the monitored object is silhouetted due to strong lighting from above or behind.	
BLC	OFF	 When the illumination differences between a monitored object is narrow. 	\checkmark
4. Gamma	ON	Applicable to a general surveil- lance monitoring system	\checkmark
correction	OFF	 When gamma correction is not required for image processing 	

11) Set the gain to the required environment by ⁽¹⁾MGC VOLUME ADJUSTING. Manually adjusted in a range between 0 to 32dB. In a low light environment, when illumination of the object is important, increase the manual gain. Lower the gain control for a clearer picture with less noise.

12) Correction of white blemish by ^(f)WHITE BLEMISH CORRECTION BUTTON. The WAT-231S2 is manufactured using high-grade CCD devices that are selected by tough standards by the manufacturer. However, it is impossible to prevent the white blemishes from occurring after shipment because the white blemish phenomena can be caused by cosmic rays. The WAT-231S2 has a white blemish correction circuit to help control the white blemish phenomena. Correct according to the following procedures, if white blemishes are present.

[PROCEDURE]

1. Completely cover the lens to prevent light entering.

- 2. Set to MWB or PWB by ⑦WHITE BALANCE MODE SELECTOR
- 3. Set to AGC ON by (BFUNCTION SWITCHES
- 4. Press the (I)WHITE BLEMISH CORRECTION BUTTON using a fine stick or piece of wire.
- 5. After 5 seconds, the white blemishes are automatically detected, and then recorded to the camera.

[ATTENTION]

- Make sure that the lens is completely shielded from light before correction of the white blemishes. If the lens is not covered properly and light can enter into the lens on to the CCD face, the correction of the white blemish may not be detected correctly.
- Make sure that ⑦WHITE BALANCE MODE SELECTOR "MWB or PWB" is selected. If any other position is selected; the data cannot be saved to the camera.

Options

To purchase these options, please contact the distributor or dealer from which you purchased the WAT-231S2.



AC Adaptor (AD901-120/230)

The recommended AC adaptor for the WAT-231S2 for a constant and stable power supply.

C-mount Adaptor (34CMA-R)

This lens mount adaptor is used to convert a CS-mount to a C-mount.

Mini Stand (MS50)

A convenient stand for the WAT-231S2. With this stand, the camera can be adjusted to any desired angle.

Specifications

Model		WAT-231S2 (NTSC)	WAT-231S2 (PAL)
Pick-up Element		1/3 inch interline transfer CCD image sensor	
Number of Total Pixels		811(H)×508(V)	795(H)×596(V)
Number of Effective Pixels		768(H)×494(V)	752(H)×582(V)
Unit Cell	Size	6.35um(H) × 7.4um(V)	6.5um(H) × 6.25um(V)
Imaging system		Ye, Cy, Mg, and G complementary color mosaic filters on chip	
Sync. Sy	stem	Internal	
Scanning S	System	2:1 interlace	
Video O	utput	Composite, Y/C: 1.0V(p-p) 75Ω (Unbalanced)	
Resolutio	n (H)	More than 540TVL (Center, Y/C)	
Minimum Illu	mination	0.05 lx F1.2	
S/N		More than 50dB (I	MGC=0dB, γ=1.0)
	OFF	1/60 sec.	1/50 sec.
	FL	1/100 sec.	1/120 sec.
AE Mode	ES	1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10000 sec.	
	EI: OFF EI: FL	1/60-1/100000 sec.	1/50-1/100000 sec.
White Ba	lance	ATW, PWB, MWB, 3200K, 4300K, 5100K, 6300K	
AGC	;	HI: 0-38dB / LO: 0-32dB	
MGC)	0-32dB	
Gamma Char	acteristics	γ ≒0.45(ON) / γ =1.0(OFF)	
Lens-i	ris	Video / DC (EIAJ arrangement, Auto-select)	
Back Li Compens	0	ON / OFF	
White ble Correct		Up to 32 dots	
Power Si	upply	DC+12V±10%	
Power Cons	umption	2.1W (175mA)	
Operating Ter	nperature	-10 - +50°C (Without condensation)	
Operating H	lumidity	Less than 95% RH	
Storage Tem	perature	-30 - +70°C (Without condensation)	
Storage Hu	umidity	Less than 95% RH	
Lens Mo	ount	CS-mount	
Size	1	44.5(W) × 44(H) × 64(D) (mm)	
Weigl	ht	Appro	x. 160g

• Design and specifications are subject to change without notice.

- Watec is not responsible for any inconvenience or the attendant damages to the video and monitoring recording equipment caused by misuse, misoperation or improper wiring of our equipment.
- If for any reason the WAT-231S2 does not work properly, or if you have any questions regarding installation or operation, please contact the distributor or dealer from which it was purchased.



1453Z00-Y2000001

.

